



KARACA

— *Elegant & Ergonomic* —

ROSE GOLD

GRANITE SANDWICH TOASTER

GRANITE COATING
RESISTANT TO SCRATCHING

INSTRUCTION MANUAL

Made in
Turkey

**2 YEARS
WARRANTY**



Unmatched Granite Coating:

The matchless granite coating system consisting of 3 layers
meets all requirements in professional level *

The non-burning and non-sticking performance is maintained in the long term *
Resistant to scratching.



0007-1129



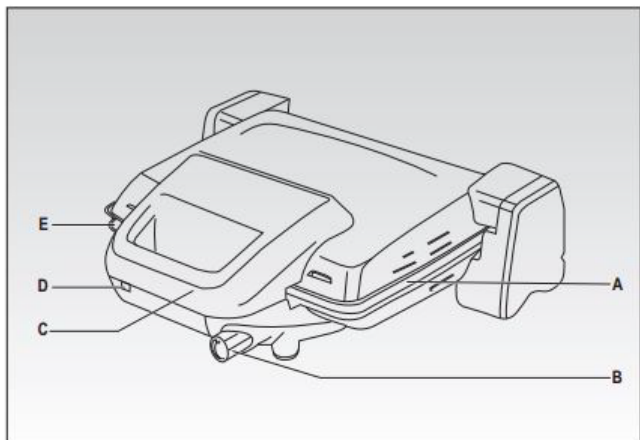 


Fig. 1

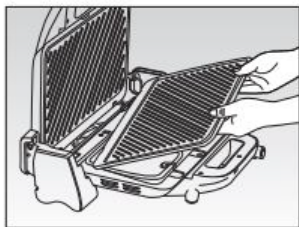 


Fig. 2

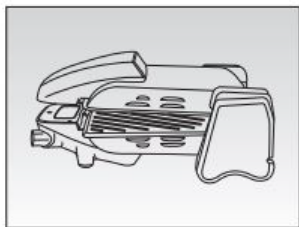 


Fig. 3

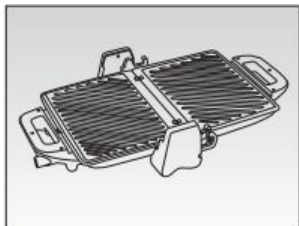 


Fig. 4

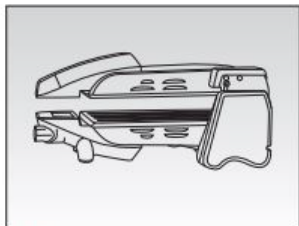 


Fig. 5

APPLIANCE DESCRIPTION (Fig. 1)

- A Interchangeable non-stick grill plates
- B Temperature adjusting knob
- C Opening handle
- D Temperature light
- E Dripper nozzle

INSTRUCTIONS FOR USE

ATTENTION:

While using for the first time, a very small amount of smoke may come out; this is just caused by the warming up of some components.

Place the appliance on a flat surface.

Make sure the plate is closed during pre-heating phase.

Before use, mount the appropriate grooved grill plates (A):

- insert the interchangeable plates in the bottom and top part of the grill, by aligning the rear slots with the hooks on the appliance body, turning them slightly until they click into place (Fig. 2).

Note: The two plates are interchangeable.

- Plug appliance in. The temperature light (D), signaling heating phase, goes on.

- Turn the dial (B) to select the required temperature setting.

- Make sure the plate is closed during pre-heating phase.

- The light (D) turns off when the appliance reaches the temperature (after about 3 minutes) and is ready for use.

OTHER TYPES OF USAGE

Grilling with wide open plates (Fig. 3)

- This appliance is ideal for grilling meat, toasts, etc.

Cooking position with open plates (Fig. 4)

- This position is suitable to grill fish, skewers, vegetable, etc. and offers a very wide surface, ideal to cook various kinds of food at the same time.

Oven grilling position (Fig. 5)

- This appliance is ideal for warming up pizza, etc.

We would like to thank you for preferring the **Karaca** brand **Grill and Sandwich Toaster**. Just like other **Karaca** products, we wish that your device will make the life easier for you.

In order to be able to use your device in an efficient way, please carefully read the user's manual and keep it for future reference.

IMPORTANT NOTES

The basic safety measures must be always followed during the use of all electrical devices.

“Unless the supervision of a person who is responsible for the safe use of the device is provided, this device is not intended for use by persons who have physical, sensorial or mental disabilities (including children), or persons who do not have the required level of experience or knowledge.”

- Please check and make sure if the mains voltage in the place of use is compatible with the voltage value specified on the **Karaca** brand **Grill and Sandwich Toaster**. Our company cannot be held responsible for any failure that may occur as a result of an incompatibility, and such failures are processed out of the product warranty coverage.
- This device is for domestic use only. It cannot be used for industrial or commercial purposes.
- In order to protect the device from failures, please do not use extension cables that do not provide sufficient amount of electric current.
- Please keep the device out of reach of children.
- Please do not place the device on or near direct heat sources such as ovens or stoves.
- Please ensure that the cable of the device does not hang from the edges of a table or countertop, or come into contact with other devices or hot surfaces.
- Please use the device on a flat and fixed surface that is resistant to heat.
- After use, please unplug the device and leave it to cooldown, and move the device only after it cools down.
- Please keep the device unplugged during cleaning and when it is not in use.
- Please never turn the device on if the heating plates are not properly assembled. Please **NEVER** immerse the device in water for cleaning or other purposes. In addition, please prevent the entrance of water/water vapour in the device.
- Please do not touch the metal parts while the device is on.
- Please avoid actions that may damage the cable and plug of the device. Hold the plug itself when you want to unplug the device and **NEVER** try to unplug by pulling the cable.
- Please do not use the device, if the cable or the plug is defective or gets damaged as a result of dropping or for other reasons. Do not attempt to fix the device yourself and call **Karaca Call Centre**.
- Please use the device in accordance with the recommendations for use.

RECOMMENDATIONS FOR USE

- You can use Karaca Grill and Sandwich Toaster for various purposes including warming up or cooking dishes, grilling, preparing sandwiches and toasting.
- Your KARACA (Type of HG2015) Grill has been designed for grilling food as described in this manual. This appliance is intended for indoor household use only. This appliance is intended to be used in: farm houses; bed and breakfast type environments.
- This appliance is not intended to be used in: Staff kitchen areas; in shops, offices and others working environments; by clients in hotels, motels and other residential type environments
- This appliance is intended it is not suitable for professional use.
- The temperature setting knob and warning light ensure safe operation of the device, prevent overheating and provide that the dishes are cooked in the desired level by keeping the cooking surfaces at the required temperature.
- You can remove the non-stick heating plates of the device by gently pressing the holding clips.
- Before the first use of the device, please clean the heating plates by use of warm water and a little amount of dishwashing detergent. Afterwards, dry and reassemble the heating plates. A clear sound from the clips would reveal proper placement of the heating plates.
- Please slightly lubricate the heating surface before the first use of the device.
- Plug in the device and apply the maximum temperature setting. A slight smoke and odour may arise, which would automatically disappear after a while.

TEMPERATURE SETTING (Min / Max)

You can set the temperature applied by the device by rotating the setting knob in both directions (Min / Max), based on your intended use.

COOKING FUNCTIONS

Sandwiches and Toasts

- Plug in the device and adjust the temperature setting knob to the desired point in order to apply preheating. The thermostat/warning light will go off when the device reached the required temperature.
- Apply oil on the outer surfaces of your toast or sandwich breads and close the upper body gently.
- Cooking time would depend on the actual situation, sandwich materials preferred and personal taste. Both sides of your sandwich or toast are cooked simultaneously by the device.
- Since the device has non-stick heating plates, you can also cook sandwiches or toasts without applying oil.

Double-Sided Grill

- Apply preheating by taking the temperature setting to the maximum level.
- Place the material to be cooked on the lower heating plate and close the upper body.
- You do not need to reverse the dishes in the double-sided grill.
- Your grills will be ready at the end of the desired time of cooking.
- Open the upper body carefully and take the dishes out of from the heating plate by use of a wooden spatula.

Single-Sided Grill

- Apply preheating by adjusting the suitable temperature setting.
- Place the material to be cooked on the lower heating plate.
- Open the upper body 90° by pulling it vertically upwards.
- When the upper body is open, you can grill your dishes without contact with the upper heating plate.
- Take the dishes out of the heating plate by use of a wooden spatula.

NOTE: Since the thermostat constantly keeps the desired temperature during use, the thermostat/warning light can be occasionally on and off.

WARNING:

1-NEVER touch the outer surfaces of the device during use, since they would also heat-up. Only use the handle to open the upper body. When the upper body is opened, or while it is closed during regular cooking, vapour may come out between the heating plates of the device. Be careful while taking dishes out of the device.

2- Only use plastic or wooden tools to take dishes out of the heating plate in order to avoid damage on the non-stick surfaces. Never use metal tongs, forks or knives, which may damage the non-stick coating.

CONDITIONS TO BE OBSERVED DURING MAINTENANCE, REPAIR AND USE

- Never attempt to dismantle and repair the device, if it is out of order.
- Do not turn on the device and consult the authorized technical service, if the device drops on the ground, it is exposed to a hard impact, or any fracture or crack appears on it.
- Never attempt to replace damaged cables or plugs yourself and consult the authorized technical service.
- Please do not carry the device by holding its cable.
- Please hold the plug itself when you want to unplug the device and never try to unplug by pulling the cable.
- Please keep the device unplugged when it is not in use.

CLEANING AND MAINTENANCE

- Please firstly unplug the device and leave it to cool down before cleaning and maintenance.
- Please clean the heating plates after every use in order to protect the non-stick material coated surfaces.
- You can clean the heating plates by use of a soft piece of cloth or a plastic brush and warm soapy water, or wash them in the dish washer.
- Resistor marks may appear on the heating plates because of the heat applied. It will be enough to wash the plates to get rid of the marks.
- Please do not use abrasive materials such as metal brushes or wires in order to avoid causing damage on the non-stick material coated surfaces.
- After removing the heating plates, you can clean the resistors and heat reflection trays by use of a piece of damp cloth.
- By winding the cable on the cable holder, you can keep the device in vertical position thanks to the automatic locking function.
- NEVER immerse the device in water, except the heating plates.

POINTS TO CONSIDER DURING TRANSPORTATION

- In order to avoid damage on the various parts of the device, it must be kept in its original box during transportation.
- Please keep the device in its ordinary position during transportation.
- Please pay attention not to drop the device during transportation and protect it against impacts.
- Damages and failures that occur during transportation after the delivery of the device to the user are not included in the warranty coverage.

TECHNICAL DATA

Input Voltage	Vac	220-240 V
Power Input	W	1800

Economic life of the product is 7 years.

The product complies with the Waste Electrical and Electronic Equipment Control (AEEE) Regulations.

WEEE

Since this device consists of recyclable materials in accordance with the WEEE Directive, it must not be disposed to the waste. Please apply to the nearest waste collection centre for the recycling of the device.

DISTRIBUTOR COMPANY

KARACA ZUCCACIYE TIC. ve SAN. A.S.
Yakuplu Merkez Mh. Birlik Cd. No: 24
Beylikduzu İstanbul / Turkey
T: +90 212 4124400 F: +90 212 4124499

Manufacturer on behalf of KARACA :

Gümüşdağ Elektronik A.Ş.
Halkalı Cad. No:227
Küçükçekmece / İstanbul / Türkiye
Made in TURKEY

KARACA WARRANTY CONDITIONS

- 1.The product is under TWO YEARS warranty coverage starting from the date of delivery.
- 2.The product, including its all parts and components, is our Company's warranty.
- 3.In case a failure occurs on the product during the warranty period, the time spent for repaid is added to the warranty period. Repair time for the product cannot exceed 20 business days, starting when the failure is notified to the technical service or to the seller, dealer, importer or manufacturer if there is no technical service. In case an industrial product failure is not eliminated in 10 business days, the importer of the exporter is obliged to make available another industrial product with comparable properties for the use of the consumer.
4. In case a failure occurs on the product during the warranty period because of a material, workmanship or manufacturing defect, the product is repaired without demanding any workmanship or spare parts cost, or any other fee under any title.
- 5.The product is replaced with a new one free of charge in case,
 - the number of the failures that occur is four or higher in a year, or six or higher within the warranty period specified by the manufacturer and/or importer, provided that such failures make the product constantly unavailable, or
 - the maximum allowable repair time is exceeded, or
 - there is no technical service station and it is specified in a report issued by the seller, dealer, agency, exporter or importer (in order of availability) that the failure is impossible to be repaired.
- 6.Any failure resulting from the use of the product in breach of the principles specified in the user's manual is out of warranty coverage.
- 7.Any workmanship or other similar fee cannot be demanded from the consumer for periodical maintenance services that are stipulated by the manufacturer or the importer and required to be performed by technical service station during the warranty period.
- 8.Any problem that may arise in relation to the warranty certificate can be referred to the Ministry of Industry and Trade, General Directorate of Protection of Competition.
- 9.The use of this document has been authorized by the "GENERAL DIRECTORATE OF CONSUMER PROTECTION AND MARKET SURVEILLANCE OF THE MINISTRY OF CUSTOMS AND TRADE", based on the Consumer Protection Law number 4077 and the Communiqué on the Warranty Certificates Implementation Principles that was put into force under the said Law.

POINTS TO CONSIDERED BY THE CONSUMER REGARDING PRODUCT WARRANTY

This warranty, issued by KARACA ZÜCCACIYE TİC. VE SAN. A.Ş. , is invalid in the following conditions:

- 1.Damages and failures that occur during loading, unloading or transportation after the product's delivery to the consumer.
- 2.Damages and failures that occur because of excessively high or low voltage, improper electric wiring or exposure to voltage different from the value specified on the product label.
- 3.Damages and failures that occur because of fire or stroke of lightning.
- 4.Damages and failures that occur because of the use of the product in breach of the principles specified in the user's manual.

Repair works for the failures defined above can be performed for a fee. Transportation of the product to the place of use and its installation are not included in the product price.

This Warranty Certificates becomes invalid if it is falsified, or the original serial number on the product is removed or distorted.

**KARACA
WARRANTY CERTIFICATE**

CONDITIONS AND COVERAGE OF WARRANTY

- 1.The warranty period if TWO YEARS and this WARRANTY CERTIFICATE must be kept during the said period, since it is required to be presented to benefit from the product warranty.
- 2.The warranty period can be extended for the period after the initial 2 years (e.g. 2-5 years), based on the conditions and an agreement between the parties.
- 3.Since the date of invoice is taken as the basis for disputes that may arise during the warranty period, presentation of the invoice or its photocopy is also required together with the certified Warranty Certificate.
- 4.The product warranty becomes invalid when the invoice of the warranty certificate is falsified, or the original serial number on the product is removed or distorted.
- 5.The product warranty becomes invalid when it is understood that the installation of the product was not performed by our company's authorized services, or the device was subjected to unauthorized dismantling.
- 6.In addition to the failures that occur because of the misuse of the product or its use under abnormal conditions, the following failures are out of our company's WARRANTY coverage:
 - Damages and failures that occur because of the use of the product in breach of the principles specified in the user's manual or the installation manual.
 - Damages and failures that occur because of excessively high or low voltage, improper electric wiring or exposure to voltage different from the value specified on the product label.
 - Damages and failures that occur because of disasters such as fire or flood, and damages and failures that occur during loading, unloading or transportation after the product's delivery to the consumer.
- 7.No one other than the consumer specified on the invoice and the warranty certificate can claim any right and/or compensation.

Manufacturer or Exporter Company:

Business name: Karaca Zuccaciye TIC. ve SAN. A.S.
Address: Yakuplu Merkez Mh. Birlik Cd. No: 24Beylikduzu Istanbul / Turkey
T: +90 212 4124400 F: +90 212 4124499
Signature and seal of the authorized person: KARACA

Seller:

Business name:
Address:
Phone – Fax:
Authorized person:
Signature and seal of the authorized person:

Invoice and dispatch note:

Invoice number:
Invoice date:
Date and place of delivery:

Product's

Type: Sandwich Toaster
Brand: Karaca
Model: ROSE GOLD
Serial number:
Warranty period: 2 years
Allowable time to repair: 20 business days

This document was issued based on the license given by the Ministry of Customs and Trade, dated 7th of May 2014 with number 131863.